


LOGITECH CRAYON

Setup guide

KNOW YOUR PRODUCT

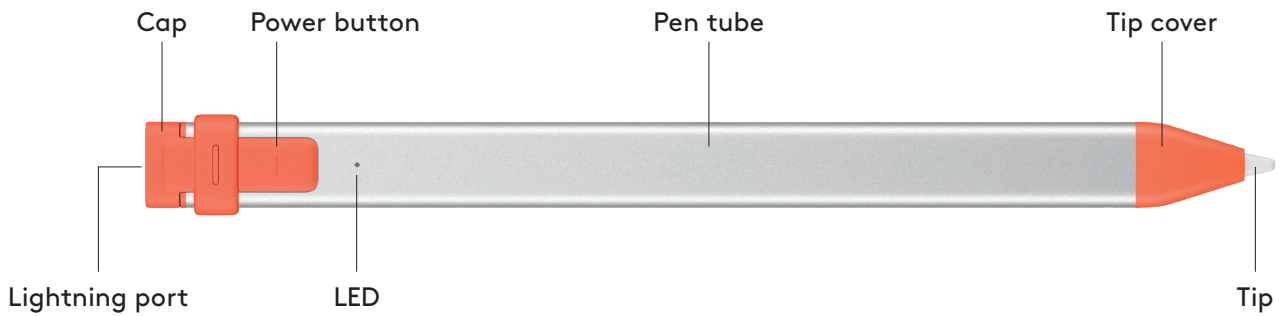

PRODUCT SETUP




Make sure iPad iOS is updated to version 11.4 or above

1. Press the power button for 1 second. The LED will turn green—ready to go.
2. If LED turns red, charge the pen before use.

LED Behavior	Logitech Crayon status
Fade in green	Power on
Fade out green	Power off
Solid green	Fully charged
Breathing green	Charging
Blinking red	Battery level is critical (less than 5%)
Red when user presses button	Battery level is low (less than 10%)
Green when user presses button	Battery level is good
Yellow	Firmware update

CHARGING

1. Flip open the cap.
2. Insert lightning cable.
3. Connect cable to a power adapter or any computer to charge.
4. LED will turn green.

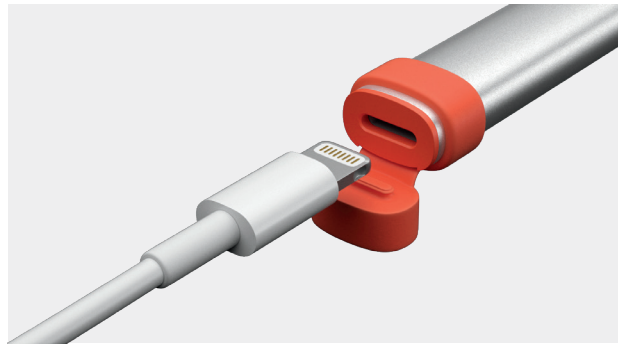


REPLACING THE TIP COVER

1




Find the removal tool.

2

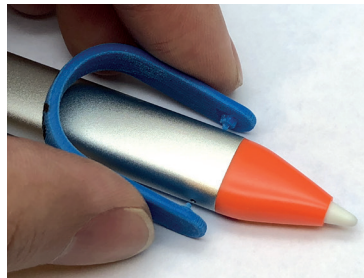

Align the tool with the two holes in the pen tube.

3

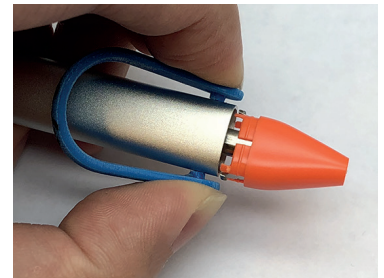


Squeeze the tool and pull off the tip cover.

4



Make sure tip is tightened before replacing tip cover.

5

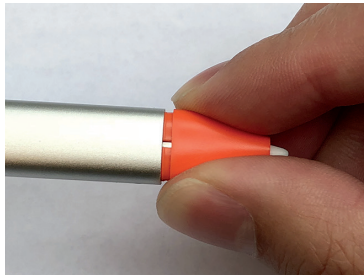


Insert new tip cover into pen until you hear a click.


REPLACING THE TIP



Find the removal tool.

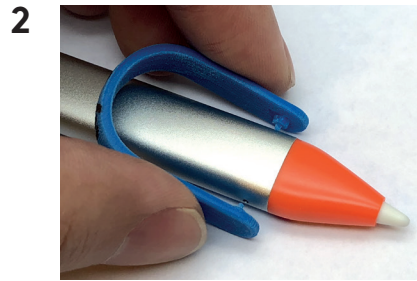


Align the tool with the two holes in the pen tube.

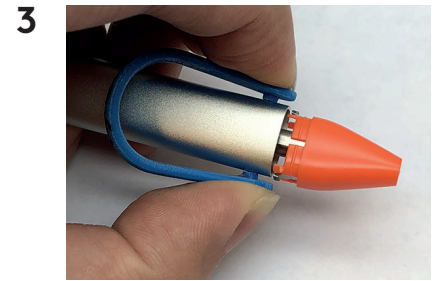


Squeeze the tool and pull off the tip cover.



Twist the tip counter-clockwise to remove.

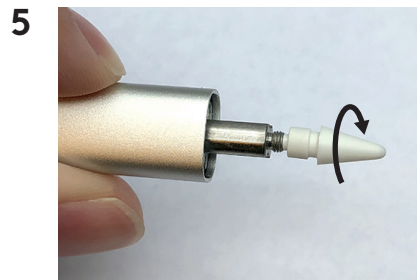


Insert new tip and twist clockwise to tighten securely.

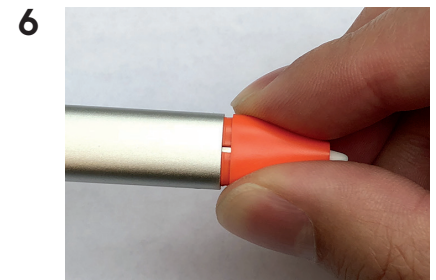


Insert new tip cover into pen until you hear a click.


REPLACING THE CAP

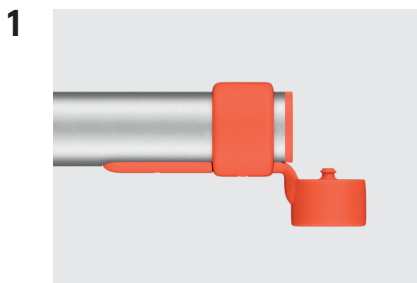


Open the cap.

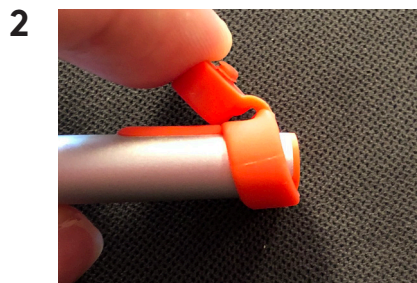

Push the cap back and slowly pull the cap ring off of the pen tube.

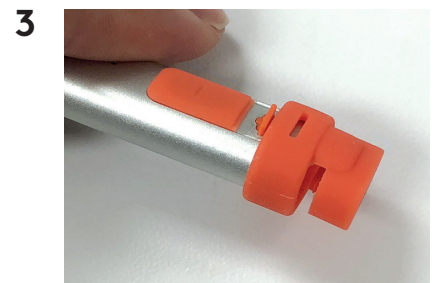

Align new cap to the pen tube.

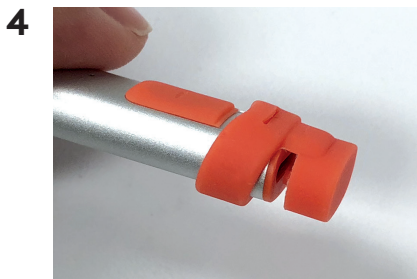

Push the cap ring into position, making sure the notch fits into slot.